

# WG235 规格书/datasheet

## WIFI 802.11n

## + Bluetooth DM 5.1

| 文档信息/Document Information |                                                     |             |
|---------------------------|-----------------------------------------------------|-------------|
| 标题/Title                  | WG235 规格书/datasheet WIFI 802.11n + Bluetooth DM 5.1 |             |
| 类型/Document type          | 规格书/datasheet                                       |             |
| 编号/Document number        | SL-21100202                                         |             |
| 版本和日期/Revision and date   | V1.01                                               | 16-Oct-2021 |
| 权限/Disclosure restriction | 公开/Public                                           |             |

## 历史版本/Revision History

| 版本/Revision | 描述/Description       | 审核/Approved | 日期/Date  |
|-------------|----------------------|-------------|----------|
| V1.01       | 初始版本/Initial Release | George He   | 20211016 |

SKYLAB 保留本文档及本文档所包含的信息的所有权利。SKYLAB 拥有本文档所述的产品、名称、标识和设计的全部知识产权。严禁没有征得 SKYLAB 的许可的情况下复制、使用、修改或向第三方披露本文档的全部或部分内容。

SKYLAB 对本文档所包含的信息的使用不承担任何责任。没有明示或暗示的保证，包括但不限于关于信息的准确性、正确性、可靠性和适用性。SKYLAB 可以随时修订这个文档。可以访问 [www.skylab.com.cn](http://www.skylab.com.cn) 获得最新的文件。

Copyright © 2021, 深圳市天工测控技术有限公司。

SKYLAB® 是深圳市天工测控技术有限公司在中国的注册商标。

SKYLAB reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of SKYLAB is strictly prohibited.

The information contained herein is provided “as is” and SKYLAB assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by SKYLAB at any time. For most recent documents, visit [www.skylab.com.cn](http://www.skylab.com.cn).

Copyright © 2021, Skylab M&C Technology Co., Ltd.

SKYLAB® is a registered trademark of Skylab M&C Technology Co., Ltd in China

## 目录/Contents

|                                                     |    |
|-----------------------------------------------------|----|
| 1.概述/General Description.....                       | 4  |
| 2.应用/Applications.....                              | 5  |
| 3.特性/Features.....                                  | 5  |
| 4.框图/Application Block Diagram.....                 | 6  |
| 5.模块引脚描述/Module Pinout Description.....             | 7  |
| 模块引脚分配/Module Pinout.....                           | 7  |
| 引脚说明/Pin Description.....                           | 7  |
| 6.接口/Interfaces.....                                | 9  |
| 6.1 GPIO.....                                       | 9  |
| 6.2 下载 firmware/Download the firmware.....          | 9  |
| 6.3 UART.....                                       | 9  |
| 6.4 PWM.....                                        | 9  |
| 7.PCB 规格尺寸/PCB Footprint and Dimensions.....        | 10 |
| 8.电气特性/Electrical Characteristics.....              | 12 |
| a)绝对最大额定值/Absolute Maximum Ratings.....             | 12 |
| b)推荐使用范围/Recommended Uses.....                      | 12 |
| c)测量条件/M Measurement Conditions.....                | 12 |
| 9. 性能参数/Performance Specification.....              | 13 |
| 10. 制造工艺/Manufacturing Process Recommendations..... | 15 |
| 11. 包装工艺/Packaging Specification.....               | 15 |
| 12.订购信息/Ordering Information.....                   | 16 |
| 13.联系方式/Contact Information.....                    | 16 |

## 1.概述/General Description

WG235 集成蓝牙双模5.1 和Wi-Fi 802.11n 的芯片。芯片集成了完整的Wi-Fi 和蓝牙应用需要的硬件和软件资源，可以支持AP 和STA 双角色连接，并同时支持经典蓝牙和低功耗蓝牙连接。运行速度最高可到120 MHz 的32-bit MCU 以及内置的256 KB RAM，可以使得芯片支持云连接。

WG235 integrates Bluetooth Dual Mode 5.1 and Wi-Fi 802.11n chips. The chip integrates hardware and software resources needed to complete Wi-Fi and Bluetooth applications, supports AP and STA dual role connections, and supports both classic and low-power Bluetooth connections.

WG235 拥有丰富的外设，如PWM、I2C、UART、SPI、SDIO 以及IRDA。可以直接通过UART 下载和烧录程序。多达六路的32 位高速PWM 输出使用芯片非常适合高品质的LED 控制。每2 个PWM 可配置为相位可控的差分模式，以支持电机和灯带驱动。

WG235 has a wealth of peripherals, such as PWM, I2C, UART, SPI, SDIO and IRDA. You can download and burn the program directly through UART. Up to six channels of 32-bit high-speed PWM output use the chip ideal for high quality LED control. Each 2 PWM can be configured for phase-controlled differential mode to support motor and lamp strip drives.

WG235 内部集成了基于优先级的Wi-Fi 和蓝牙共存控制模块，实现实时的优先级和收发调度。

WG235 可以提供当前收发器的收发状态指示，从而支持外部的PA 和LNA 扩展。

WG235 internally integrates priority-based Wi-Fi and Bluetooth coexisting control module to realize real-time priority and dispatch. WG235 supports external PA and LNA extensions by providing an indication of the transceiver status of the current transceiver.

WG235 内嵌EFUSE 并支持FLASH 内的OTP 读写，可以用于提供唯一序列号、代码加密并保护调试接口安全。内部集成了真随机数发生器和安全模块，保证通信的安全和快速的身份验证和网络连接。WG235 has built-in EFUSE and supports OTP reading and writing within Flash, which can be used to provide unique serial numbers, code encryption, and secure debugging interfaces. Internal integration of true random number generator and security module, ensure the security of communication and fast authentication and network connection.

WG235 支持低功耗睡眠模式，MCU 可以进入睡眠状态，达到微安级的睡眠电流。WG235 支持的深度睡眠模式，可以在几个微安的电流下，运行32 位时钟，并可以被此时钟唤醒或者被任何GPIO 唤醒。

The WG235 supports low-power sleep mode, and the MCU can enter the sleep state and reach the microamp level of sleep current. The WG235 supports deep sleep mode, which can run 32 bit clock at several microampals of current and can be awakened by this clock or by any GPIO.

WG235是一款外形小巧，支持协议802.11 b / g / n 的单流板载低功耗应用处理器的WIFI模块。它是一个低成本串行WIFI模块，支持UART-WIFI-以太网数据传输。

WG235 is a compact WIFI module that supports 802.11b/g/n single-stream, low-power application processor. It is a low cost serial WIFI module that supports UART-WIFI-ethernet data transmission.



图 1: WG235 正视图/ WG235 Top view

## 2.应用/Applications

- ◆ 物联网/ IOT (internet of things)
- ◆ 网络消费设备/ Network Consumer Device
- ◆ 计量/ Metering
- ◆ 楼宇自动化/ Building Automation
- ◆ 家庭自动化/ Home Automation
- ◆ 智能家居网关/ Smart Home Gateway
- ◆ 智能照明/ Smart Lighting
- ◆ 智能插头和灯/ Smart Plugs and Lights
- ◆ 婴儿监视器/ Baby Monitors
- ◆ 网状网络/ Mesh Network
- ◆ 传感器网络/ Sensor Network
- ◆ 工业控制/ Industry Control

## 3.特性/Features

- ◆ 符合 IEEE 802.11b/g/n WLAN/ 802.11 b/g/n
- ◆ 集成经典蓝牙和低功耗BLE系统/ Integrated classic Bluetooth and low power BLE system
- ◆ 蓝牙和Wi-Fi 共享天线和收发电路/ Bluetooth and Wi-Fi share antennas and transceiver circuits
- ◆ 内部基于优先级的调度逻辑保证蓝牙和Wi-Fi 双连接的稳定并能够有效地共享空中资源/ Internal

priority-based scheduling logic ensures the stability of Bluetooth and Wi-Fi dual connections and the efficient sharing of air resources

- ◆ 802.11 n (2.4 GHz), 高达150Mbps/ 802.11n (2.4 GHz)up to 150Mbps
- ◆ 支持STA/ AP/ Support STA and AP

- ◆ AT Set, 云服务器, 应用程序/ AT Set, cloud server, application
- ◆ 网络协议: IPv4, TCP/ UDP/ HTTP/ FTP/ Network protocol: IPv4, TCP/ UDP/ HTTP/ FTP
- ◆ 256 KB 内部RAM/ 256 KB internal RAM
- ◆ 2MB 内部Flash/ 2 MB internal Flash
- ◆ 256 Byte ~ 2K Byte OTP
- ◆ Wi-Fi保护访问 (WPA)/ WPA2/ WPA2企业版/无线网络连接受保护的设置 (WPS)/ Wi-Fi Protected Access (WPA)/ WPA2/ WPA2 Enterprise/ Wireless Network Connection Accepted Settings (WPS)
- ◆ 六路高速10 位多通道ADC, 并支持内部滤波到16 位/Six high-speed 10bit multi-channel ADC, and support internal filtering to 16bit
- ◆ 符合ROHS 环保要求/ ROHS
- ◆ 符合FCC,CE/ FCC,C

## 4.框图/Application Block Diagram

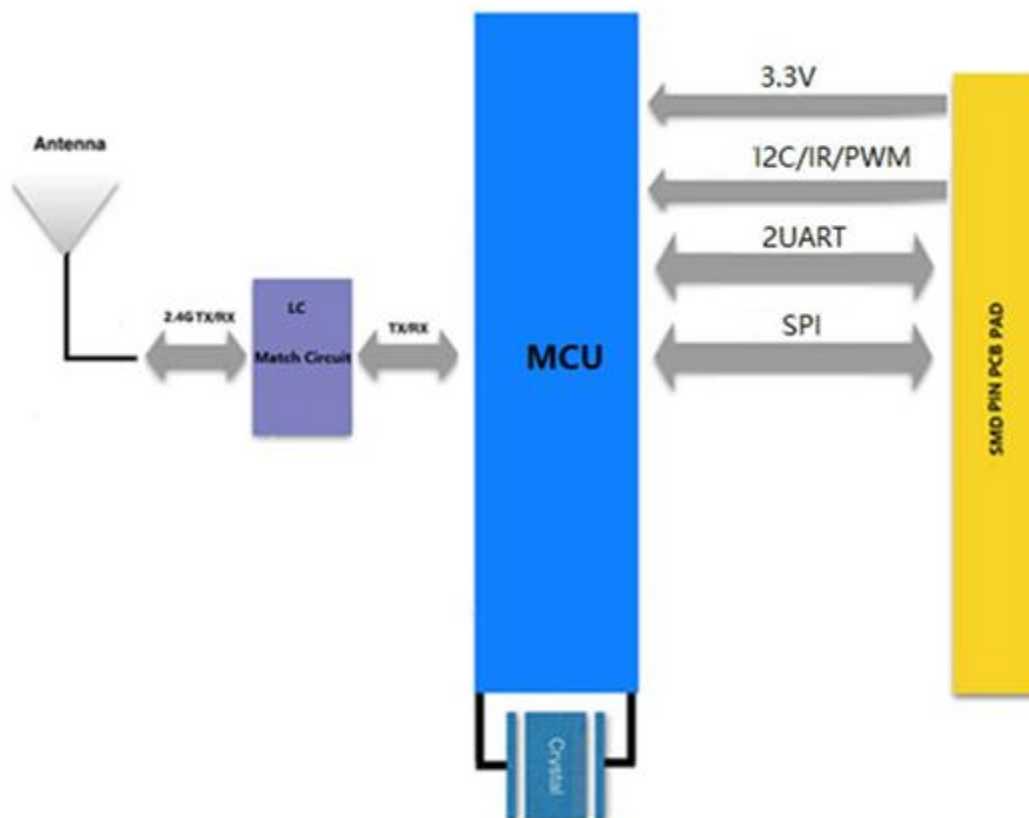


图2: WG235 方框图/Block Diagram

## 5.模块引脚描述/Module Pinout Description

### 模块引脚分配/Module Pinout

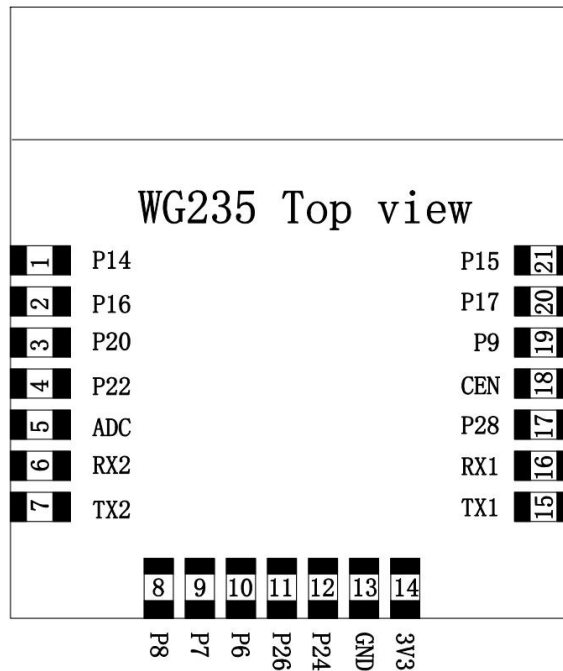


图 3: WG235 Pin封装/packaging

### 引脚说明/Pin Description

| 引脚序号 | 符号  | IO 类型 | 功能                            |
|------|-----|-------|-------------------------------|
| 1    | P14 | I/O   | 普通 GPIO, P14/SD_CLK/SCK/ANT0  |
| 2    | P16 | I/O   | 普通 GPIO, P16/SD_CMD/MOSI/ANT2 |
| 3    | P20 | I/O   | 普通 GPIO, P20_TCK_F_SCK        |
| 4    | P22 | I/O   | 普通 GPIO, P22_TDI_F_SI         |
| 5    | ADC | I/O   | ADC 口, 对应 IC 的P23             |
| 6    | RX2 | I/O   | UART_RX2, 对应IC 的 P1           |
| 7    | TX2 | I/O   | UART_TX2, 打印日志口, 对应 IC 的 P0   |
| 8    | P8  | I/O   | P8_PWM2                       |

|    |     |     |                                |
|----|-----|-----|--------------------------------|
| 9  | P7  | I/O | P7_PWM1                        |
| 10 | P6  | I/O | 支持硬件 PWM0                      |
| 11 | P26 | I/O | P26/ADC1/IRDA/PWM5             |
| 12 | P24 | I/O | P24/ADC2/LPO_CLK/PWM4          |
| 13 | GND | P   | 电源地                            |
| 14 | 3V3 | P   | 电源 3V3                         |
| 15 | TX1 | I/O | UART_TX1, 用户数据发送口, 对应 IC 的 P11 |
| 16 | RX1 | I/O | UART_RX1, 用户数据接收口, 对应 IC 的 P10 |
| 17 | P28 | I/O | P28/ADC4/RXEN                  |
| 18 | CEN | I/O | 复位脚, 低电平复位, 不用可悬空              |
| 19 | P9  | I/O | 支持硬件 PWM3                      |
| 20 | P17 | I/O | 普通 GPIO, 可以复用为 SPI_MISO        |
| 21 | P15 | I/O | 普通 GPIO, 可以复为 SPI_CS           |

**注意:** UART2.TX不能拉低, 否则会进入到测试模式。

**Note:** Uart2.TX cannot be pulled down, otherwise it will enter test mode.

## 6.接口/Interfaces

### 6.1 GPIO

WG235 有 18 个GPIO 引脚，可以通过编写适当的寄存器来分配给各种功能。（最大驱动能力 6mA）

这些引脚可与I2C、I2S、UART、PWM、IR远程遥控等功能复用。

The WG235 has 18 GPIO pins which can be assigned to various functions by programming the appropriate registers.(Maximum drive capacity 6mA)

These pins can be multiplexed with other functions such as I2C, I2S, UART, PWM, IR remote control etc.

### 6.2 下载 firmware/Download the firmware

表6-1: Download pin share scheme

| WG235 Pin Number | Pin Name | Function Name |
|------------------|----------|---------------|
| 15               | TXD1     | UART(default) |
| 16               | RXD1     | UART(default) |

### 6.3 UART

表6-2:UART pin share scheme

| WG235 Pin Number | Pin Name | GPIO | Function Name  |
|------------------|----------|------|----------------|
| 16               | RXD1     | P10  | UART1_RXD(AT)  |
| 15               | TXD1     | P11  | UART1_TXD(AT)  |
| 6                | RXD2     | P1   | UART2_RXD(LOG) |
| 7                | TXD2     | P0   | UART2_TXD(LOG) |

### 6.4 PWM


表6-3: PWM pin share scheme



| WG235 Pin Number | Pin Name | GPIO | Function Name |
|------------------|----------|------|---------------|
| 10               | P6       | P6   | PWM0          |
| 9                | P7       | P7   | PWM1          |
| 8                | P8       | P8   | PWM2          |
| 19               | P9       | P9   | PWM3          |

## 7.PCB 规格尺寸/PCB Footprint and Dimensions

WG235 尺寸大小:  $15.8\pm0.35\text{mm}$  (W) $\times 20.3\pm0.35\text{mm}$  (L)  $\times 2.7\pm0.1\text{mm}$  (H)。WG235 尺寸如

下图所示:

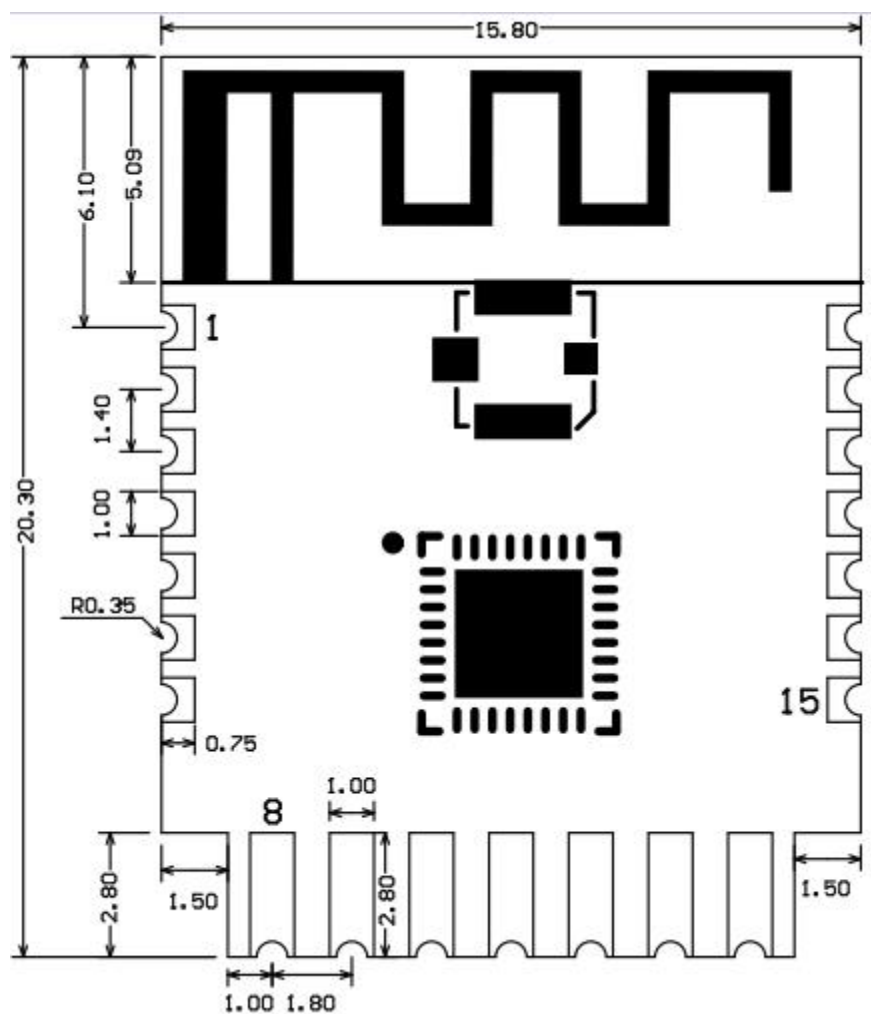

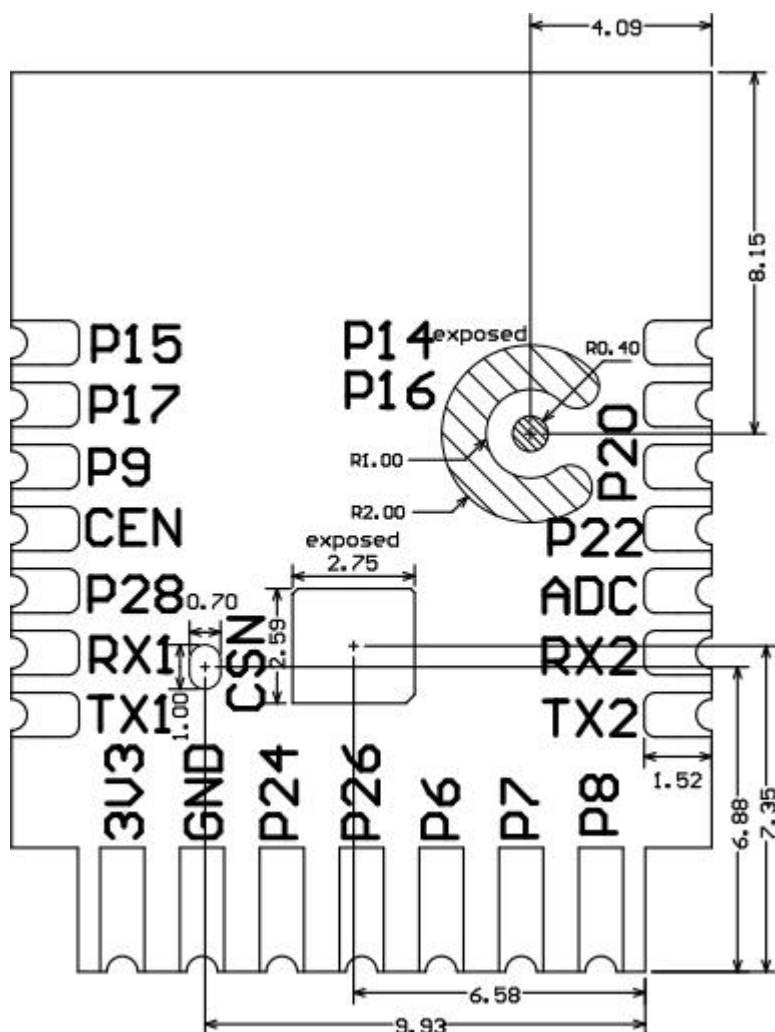

单位: mm  
Unit: mm

模组外形公差:  $\pm 0.3\text{mm}$   
Module form factor tolerance:  $\pm 0.3\text{mm}$

板厚公差:  $\pm 0.1\text{mm}$   
Plate thickness tolerance:  $\pm 0.1\text{mm}$

屏蔽盖高度公差:  $\pm 0.05\text{mm}$   
Shield cover height tolerance:  $\pm 0.05\text{mm}$

图4: WG235 参考 PCB 封装/Recommend PCB Footprint

## 8.电气特性/Electrical Characteristics

### a)绝对最大额定值/Absolute Maximum Ratings

表8-1: 绝对最大额定值/Absolute Maximum Ratings

| Parameter                            | Condition | Min. | Type | Max. | Unit |
|--------------------------------------|-----------|------|------|------|------|
| 存储温度范围/<br>Storage temperature range |           | -40  |      | 125  | °C   |
| ESD 保护/ESD protection                | VESD      | /    |      | 2000 | V    |
| 电源电压/Supply voltage                  | VDD33     | 0    |      | 3.6  | V    |
| I/O脚上电电压/<br>Voltage On Any I/O Pin  |           | -0.3 |      | 3.63 | V    |

### b)推荐使用范围/Recommended Uses

表8-2: 操作条件/Operating conditions

| Parameter                             | Symbol | Min. | Type | Max. | Unit |
|---------------------------------------|--------|------|------|------|------|
| 扩展温度范围/<br>Extended temperature range | TA     | -20  |      | 70   | °C   |
| 电源/Power Supply                       | VDD33  | 3.0  | 3.3  | 3.6  | V    |
| 输入低电平/<br>Input Low Voltage           | VIL    | -0.3 |      | 0.8  | V    |
| 输入高电平/<br>Input High Voltage          | VIH    | 2    |      | 3.6  | V    |

### c)测量条件/Measurement Conditions

表8-3: 不同状态下的功耗/Power consumption in different states

| 系统状态/System State     | Description             | Current (Typ.)@3.3V |
|-----------------------|-------------------------|---------------------|
| 发射电流/Emission current | 18dBm, 802.11b 11Mbps   | 110mA               |
| 发射电流/Emission current | 12dBm, 802.11g 54Mbps   | 104mA               |
| 接收电流/Receive current  | -10dBm输入、802.11b 11Mbps | 50mA                |
| 接收电流/Receive current  | -10dBm输入、802.11g 54Mbps | 60mA                |

|                                 |                                                                                                                                                                                                                                                                                                                    |      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 深度睡眠/Deep sleep                 | 主MCU 系统断电，只有GPIO 状态保持并且AON 部分保持工作。GPIO 边沿改变或者AON 计数器中断可以唤醒系统到工作状态。AON 的保持寄存器保持内容。<br>The main MCU system is powered down, only GPIO status remains and the AON part remains active. GPIO edge change or AON counter interruption can wake the system to working state. The hold register of AON holds the contents | 5uA  |
| 关机模式/Shutdown                   | 当CEN=0 系统进入关机模式。当CEN=1 持续几个毫秒后，系统上电启动进入工作模式s<br>When CEN=0 the system enters shutdown mode. When CEN=1 lasts for a few milliseconds, the system is powered up to enter the operating mode s                                                                                                                        | 1uA  |
| 正常待机模式/Normal Standby           | MCU 停止运行，外设可以继续工作，并产生中断唤醒 MCU 继续运行<br>When the MCU stops running, the peripheral can continue working and generates an interrupt to wake the MCU to continue running                                                                                                                                               | 30uA |
| 低电压待机模式/<br>Low voltage Standby | MCU 和所有数字外设的时钟都被停止，此时仅有GPIO 中断和AON 计数器中断可以唤醒系统恢复到正常电压继续运行<br>The clock of the MCU and all digital peripherals is stopped, and only GPIO interruption and AON counter interruption can wake the system to resume operation at normal voltage                                                                        | 10uA |

## 9. 性能参数/Performance Specification

表9-1: 硬件特性参数/Hardware Features

| 硬件特性/Hardware Features          |                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 模块/Model                        | WG235                                                                                                                                                      |
| 天线类型/Antenna type               | PCB Antenna or IPEX Connector                                                                                                                              |
| 电压/Voltage                      | 3.3V+/-10%                                                                                                                                                 |
| 尺寸(L×W×H)/<br>Dimensions(L×W×H) | 20.3mm*15.8mm*2.7mm                                                                                                                                        |
| 其他/Others                       |                                                                                                                                                            |
| 环境/environment                  | Operating Temperature: -20℃~70℃<br>Storage Temperature: -40℃~125℃<br>Operating Humidity: 10%~90% non-condensing<br>Storage Humidity: 5%~90% non-condensing |

表9-2: WIFI特性参数/WIFI Features

| 2.4GHz WIFI 特性/2.4GHz WIFI Features                                     |                                                                             |
|-------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| 无线标准/Wireless standards                                                 | IEEE 802.11 b/g/n                                                           |
| 频率范围/Frequency range                                                    | 2.412-2.484GHz                                                              |
| 传输速率/Data rates                                                         | IEEE 802.11 b Standard Mode: 1,2,5.5,11Mbps                                 |
|                                                                         | IEEE 802.11g Standard Mode: 6,9,12,18,24,36,48,54Mbps                       |
|                                                                         | IEEE 802.11n Standard Mode: 150Mbps @ HT40(MCS7)                            |
| 2.4G 接收灵敏度/<br>2.4G Receive sensitivity                                 | HT20 MCS7 : -70dBm@10% PER(MCS7)                                            |
|                                                                         | OFDM 54M: -72dBm@10% PER                                                    |
|                                                                         | CCK, 11M: -86dBm@ 8% PER                                                    |
| 无线安全/Wireless security                                                  | Supports WEP64/128, WPA, WPA2, TKIP, WAPI, and AES hardware encryption      |
| 发射功率 $\pm 2$ dBm/<br>Wireless transmit power with $\pm 2$ dBm tolerance | IEEE 802.11n: 11-13dBm@HT20 MCS7 IEEE 802.11g: 12dBm<br>IEEE 802.11b: 18dBm |
| 工作模式/ Work mode                                                         | Soft AP/ Station                                                            |

表9-3: BLE特性参数/BLE Features

| 参数/Parameter                     | 条件/Condition | 最小/Minimum | 典型/Typical | 最大/Maximum | 单位/Unit |
|----------------------------------|--------------|------------|------------|------------|---------|
| 工作频率/<br>Working frequency       |              | 2402       |            | 2480       | MHz     |
| 空中速率/<br>Data Rate               |              |            | 1          |            | Mbps    |
| 发射功率<br>/Wireless transmit power |              | -20        | 5          | 20         | dBm     |
| 灵敏度/<br>Sensitivity              |              |            |            | -97        | dBm     |
| 最大射频信号输入/Maximum RF signal input |              | -10        |            |            | dBm     |

## 10. 制造工艺/Manufacturing Process Recommendations


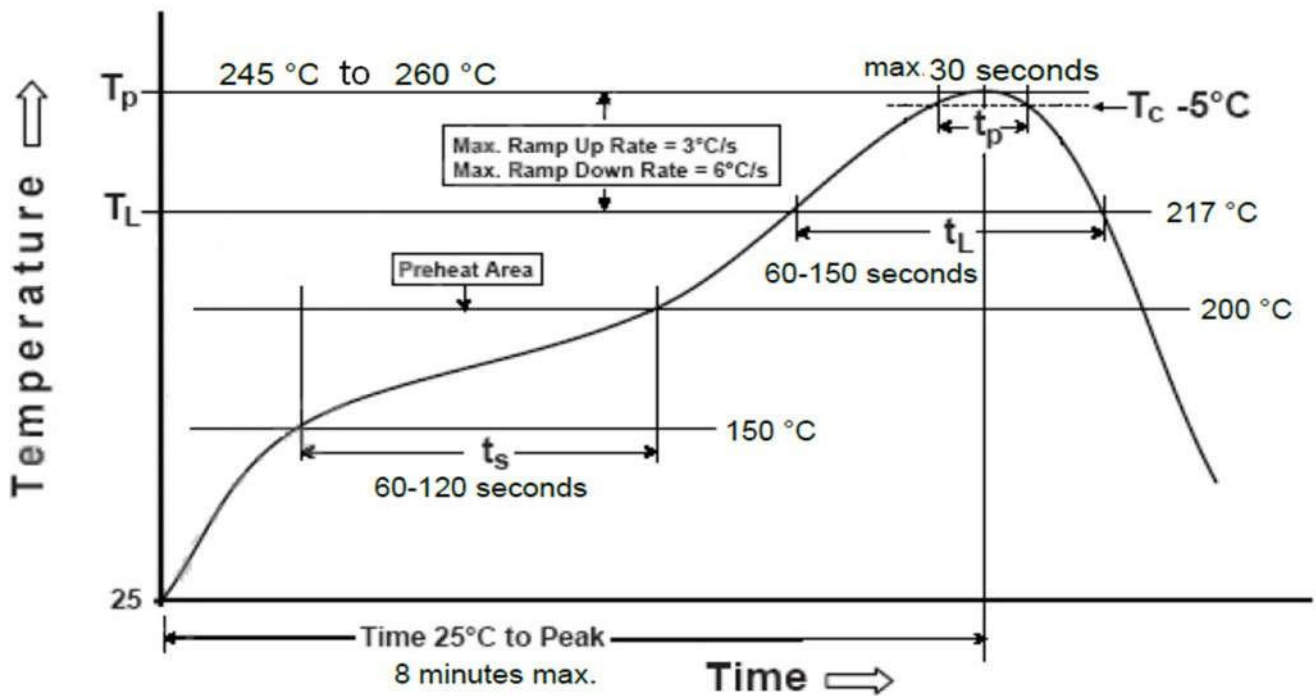


图 5: WG235 Typical Lead-free Soldering Profile

**注意:** 工厂最终选择的焊接温度取决于其他外部因素，如焊锡膏的选择、基板的尺寸、厚度和性能等。超过推荐的焊接型材中的最高焊接温度可能永久损坏模块。

**Note:** The final welding temperature selected by the plant depends on other external factors, such as solder paste selection, substrate size, thickness and performance. Exceeding the recommended maximum welding temperature in the welded profile may permanently damage the module.

## 11. 包装工艺/Packaging Specification

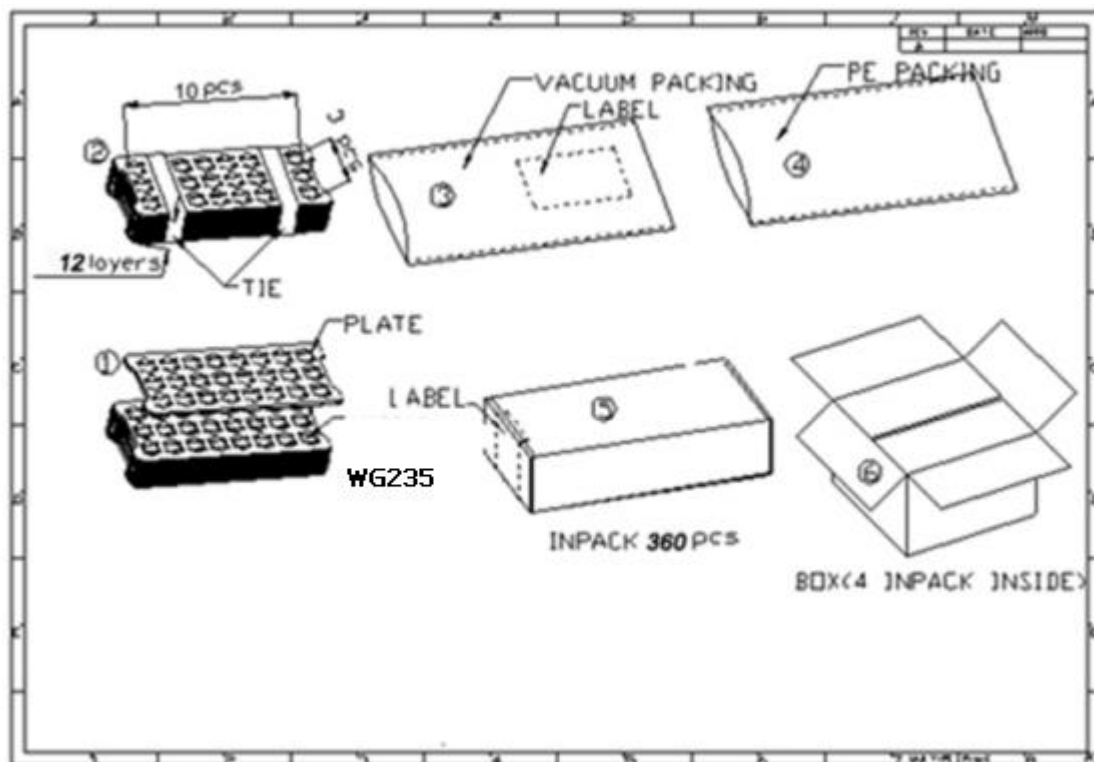

## 12. 订购信息/Ordering Information

|            |                        |
|------------|------------------------|
| Module No. | Antenna Connector Type |
| WG235      | PCB Antenna            |

## 13. 联系方式/Contact Information

**Skylab M&C Technology Co., Ltd.**

深圳市天工测控技术有限公司

Address: 6Floor, No.9 Building, Lijincheng Scientific & Technical park, Gongye East Road,  
Longhua District, Shenzhen, Guangdong, China

地址：中国广东省深圳市龙华区龙华街道工业东路利金城科技工业园9栋6楼

销售热线: 86-755 8340 8210 (Sales Support)

技术支持: 86-755 8340 8510 (Technical Support)

传真/ Fax: 86-755-8340 8560

邮箱/ E-Mail: sales1@skylab.com.cn

网页/ Website: www.skylab.com.cn

www.skylabmodule.com