

WG209-X Datasheet

USB WiFi Module

Document information		
Title	WG209-X USB Datasheet WiFi Module	
Document type	Datasheet	
Revision and date	V2.01	26-July -2021
Disclosure restriction	Public	

Revision History

Revision	Description	Approved	Date
V1.01	Initial	George	20170225
V1.02	Update Top View Photo	George	20170608
V1.03	Update certification information	George	20170831
V1.04	Update Reference Design Schematic	George	20171213
V2.01	Update the format	Wendy	20210726

SKYLAB reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of SKYLAB is strictly prohibited.

The information contained herein is provided “as is” and SKYLAB assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by SKYLAB at any time. For most recent documents, visit www.skylab.com.cn.

Copyright © 2017, Skylab M&C Technology Co., Ltd.

SKYLAB® is a registered trademark of Skylab M&C Technology Co., Ltd in China.

Contents

Contents.....	3
1 General Description.....	4
2 Applications.....	4
3 Features.....	5
4 Applications Block Diagram.....	5
5 Ordering Information.....	6
6 Performance Specification.....	6
Wireless Specifications.....	6
Transmit Power And Receive Sensitivity.....	7
7 Electrical Characteristics.....	9
Absolute Maximum Rating.....	9
Operating Conditions.....	9
Power Consumption for 2.4 GHz Operation.....	9
8 Module Pinout.....	10
9 Pin Description.....	10
10 PCB Dimensions.....	11
11 Reference design schematic.....	11
12 Packaging Specification.....	12
13 Contact Information.....	13

1 General Description

WG209-X is a 802.11n/ b/g WiFi one-stream USB interface designed specifically to provide enhanced WiFi performance and value for home gateways, set-top boxes, gaming consoles, printers, IP cameras, and variety of other products that host processors not originally intended to support WiFi functions. WG209-X's MT7601 single-chip features a new architecture that integrates both a CPU and memory to run more of the WiFi function on-chip. The integrated CPU offloads the wireless processing overhead from the host appliance and enables consumer electronic devices to support WiFi functions seamlessly without change of original host processors.



Figure 1: WG209-X Top View

2 Applications

- ◆ Desktop Computer
- ◆ Laptop Computer,
- ◆ IP Camera
- ◆ IP TV
- ◆ IP DVD(Internet VOD Player)
- ◆ Set Top Box
- ◆ Home Gateways
- ◆ Gaming Consoles
- ◆ Printers

3 Features

- ◆ Compliant to IEEE 802.11b/g/n WLANs
- ◆ 2.4 GHz WLAN MAC/BB processing
- ◆ Security: WEP 64/128, WPA, WPA2, TKIP, AES, WAPI
- ◆ Supports for Windows XP 32/64, 2000, Vista 32/64bit, Windows 7 32/64bit, Linux, Android.
- ◆ Power Supply: 3.3V or 5.0V
- ◆ Package: SMD or 4pin/6pin Connector
- ◆ USB 2.0 high speed interface.
- ◆ Supports 72.2Mbps for 20MHz and 150Mbps for 40MHz channel operations.
- ◆ FCC,CE certificated.
- ◆ ROHS certificated meets environment-friendly requirement.
- ◆ 30(L) x 15(W) x 2.8(H) mm small dimension

4 Applications Block Diagram


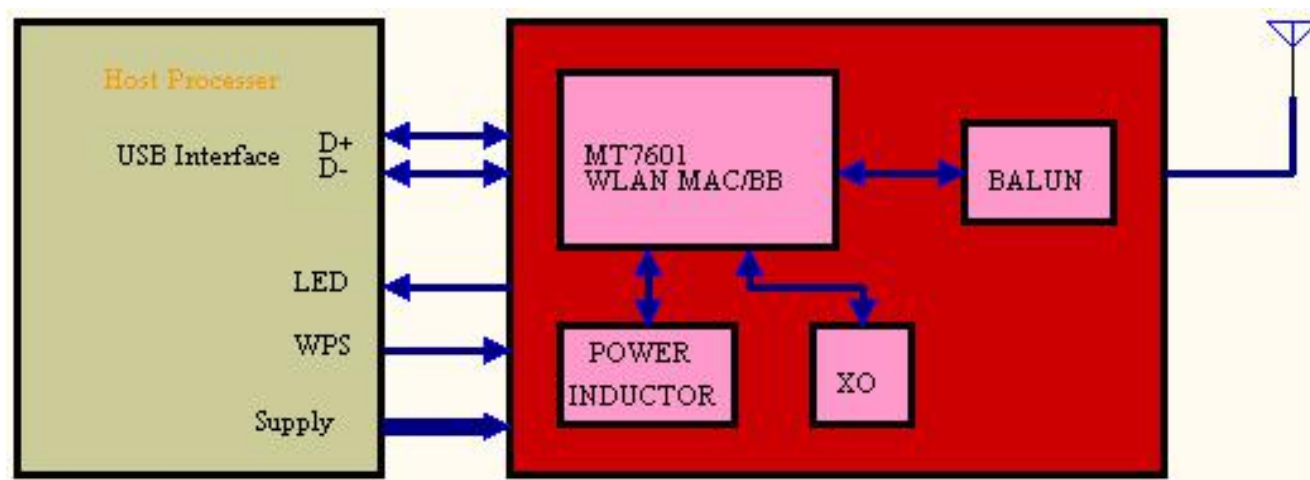


Figure 2: WG209-X Block Diagram

5 Ordering Information

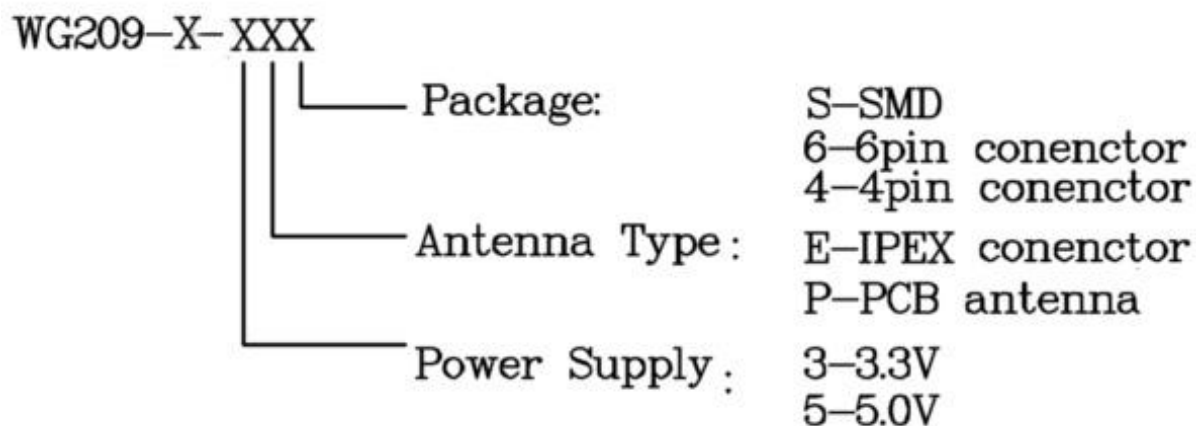

6 Performance Specification

Wireless Specifications

Model	WG209-X
Antenna Type	IPEX connector or PCB Antenna
Standard Conformance	802.11b, 802.11g, and 802.11n
Frequency Range	USA: 2.400 ~ 2.483GHz
	Europe: 2.400 ~ 2.483GHz
	Japan: 2.400 ~ 2.497GHz
	China: 2.400 ~ 2.483GHz
Modulation Technique	DSSS with CCK, DQPSK, DBPSK
	OFDM with BPSK, QPSK, 16QAM, 64QAM
Channel Spacing	5MHz/20MHz/40MHz
Data Rate	802.11b: 1, 2, 5.5 and 11Mbps
	802.11g: 6, 9, 12, 18, 24, 36, 48, 54Mbps
	802.11n: 20MHz channel: 1Nss: 65Mbps @ 800GI, 72.2Mbps @ 400GI (Max.)
	40MHz channel: 1Nss: 135Mbps @ 800GI, 150Mbps @ 400GI (Max.)

Operating Channels	USA/Canada: 11 (1~11)
	Major Europe Countries: 13 (1~13)
	France: 4 (10~13)
	Japan: 14 for 802.11b (1~13 or 14th), 13 for 802.11g (1~13)
	China: 13 (1~13)
Wi-Fi Compliance	Wi-Fi 2.4GHz by request
Certification	FCC、CE
Security	64/128/152-bit WEP encryption
	WPA/WPA2 encryption
	AES-CCM & TKIP encryption

Transmit Power And Receive Sensitivity

Transmit Power	target power tolerance $\pm 2\text{dBm}$			
	802.11b:	+18dBm for 802.11b CCK		
	802.11g:	+15dBm @ 6, 9, 12, 18, 24, 36, 48Mbps		
		+15dBm @ 54Mbps		
	802.11n HT20:	+13dBm @ MCS 7/15		
	802.11n HT40:	+13dBm @ MCS 7/15		
Receiver Sensitivity		Data Rate	IEEE Spec(1 Rx dBm)	Typical
	802.11b	1M	-82	-92
		5.5M	-80	-89
		11M	-76	-87
	802.11g	6M	-82	-92
		9M	-81	-92
		12M	-79	-91
		18M	-77	-90
		24M	-74	-86
		36M	-70	-83

		48M	-66	-78
		54M	-65	-76
	802.11n HT20	MCS0	-82	-92
		MCS1	-79	-91
		MCS2	-77	-90
		MCS3	-74	-85
		MCS4	-70	-82
		MCS5	-66	-79
		MCS6	-65	-75
		MCS7	-64	-73
	802.11n HT40	MCS0	-79	-88
		MCS1	-76	-87
		MCS2	-74	-86
		MCS3	-71	-82
		MCS4	-67	-78
		MCS5	-63	-75
		MCS6	-62	-72
		MCS7	-61	-70
Operation Distance		Outdoor		Indoor
	802.11b	150m @ 11Mbps		30m @ 11Mbps
		300m @ 1Mbps		100m @ 1Mbps
	802.11g	50m @ 54Mbps		30m @ 54Mbps
		300m @ 6Mbps		100m @ 6Mbps
	802.11n HT20	30m @ 150Mbps		20m @ 150Mbps
		30m @ 65Mbps		20m @ 65Mbps
		250m @ 6.5Mbps		100m @ 6.5Mbps

7 Electrical Characteristics

Absolute Maximum Rating

Parameter	Symbol	Min	Max	Units
Supply Voltage	VCC_3V3	0.3	4	V
Supply Voltage	VCC_5.0V	0.3	7	V
RF input (reference to 50 Ω)	RFin		10	dBm
Storage Temperature	Tstore	-40	85	°C
Junction Temperature	Tjunction		85	°C
Electrostatic Discharge Tolerance	ESD		2000	V

Operating Conditions

Parameter	Symbol	Min	Type	Max	Units
Supply Voltage	VCC_3V3	3	3.3	3.6	V
Supply Voltage	VCC_5.0V	3.6	5.0	7.0	V
RF input (reference to 50 Ω)	RFin		10	dBm	dBm
Operation temperature	Toperation	-20	25	70	°C
Thermal Parameter	PsiJT			3.23	°C/W

Power Consumption for 2.4 GHz Operation

Mode	Operating Mode	VDD_3V3(mA)
HT40 @15dBm	Sleep	50
	TX	210
	RX	151
802.11g @17dBm	Sleep	50
	TX	233
	RX	151
802.11b @19dBm	Sleep	50
	TX	242
	RX	151

Note: For Tx, transmitter and synthesizer are on. Tx power at 18dBm for 802.11b/g/HT20 and 16 dBm HT40. For Rx, receiver and synthesizer are on with maximum receiver gain.

8 Module Pinout

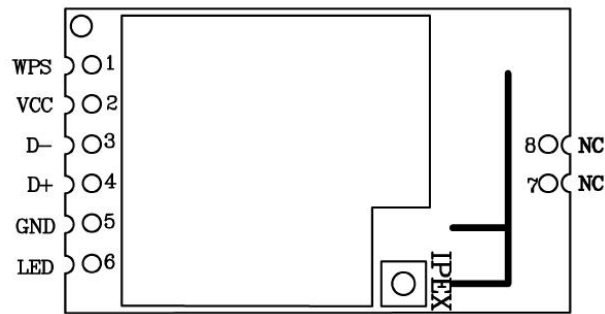


Figure 3: WG209-X Pin Name (top view)

9 Pin Description

Pin No.	Pin name	I/O	Description	Remark
1	WPS	I	WPS pin	
2	VCC	P	Module Power Supply	
3	D-	I/O	USB Interface DM	
4	D+	I/O	USB Interface DP	
5	GND	G	Ground	
6	LED	O	LED pin	
7	NC			
8	NC			

10 PCB Dimensions

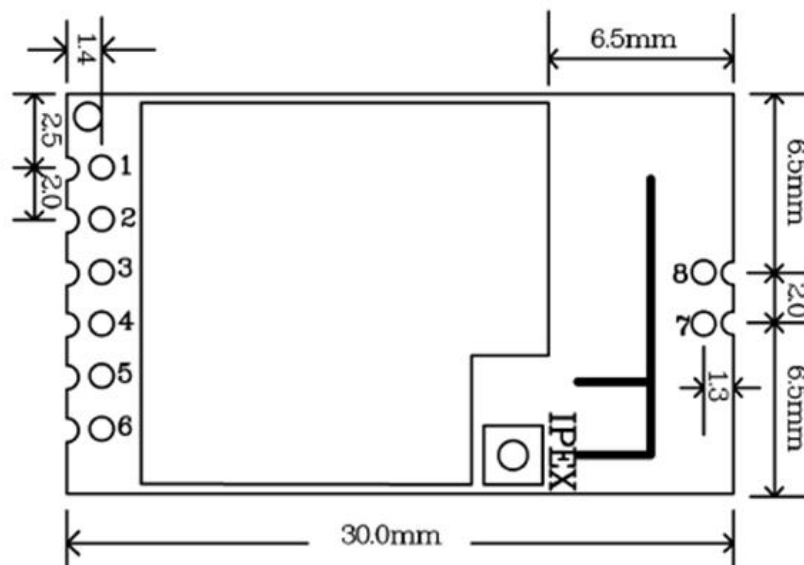


Figure 4: WG209-X Dimensions

11 Reference design schematic

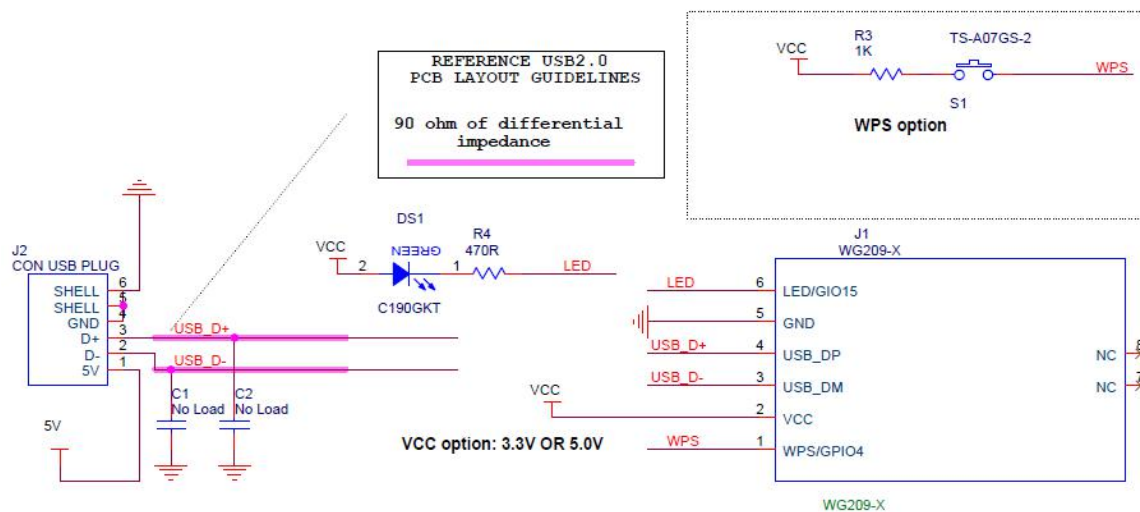


Figure 5: WG209-X schematic application

12 Packaging Specification

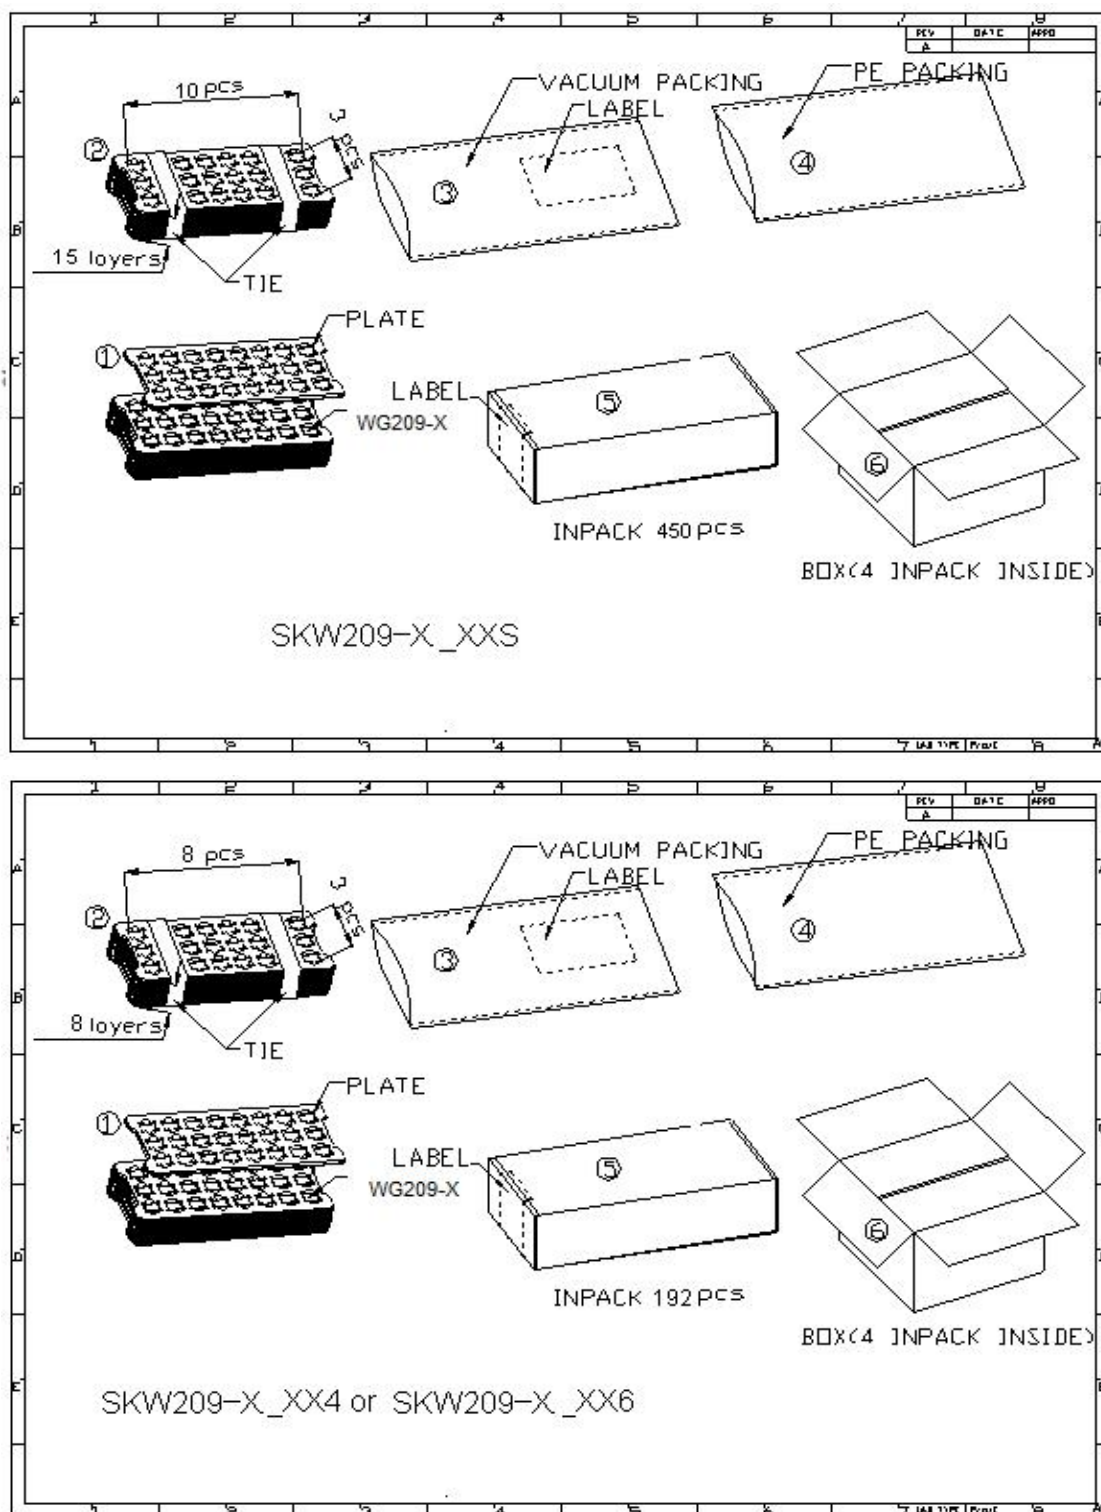


Figure 5: WG209-X Packaging

13 Contact Information

Skylab M&C Technology Co., Ltd.

深圳市天工测控技术有限公司

Address: 6 Floor, No.9 Building, Lijincheng Scientific & Technical park, Gongye East Road,
Longhua District,, Shenzhen, Guangdong, China

Phone: 86-755 8340 8210 (Sales Support)

Phone: 86-755 8340 8130 (Technical Support)

Fax: 86-755-8340 8560

E-Mail: sales1@skylab.com.cn

Website: www.skylab.com.cn www.skylabmodule.com